


AIRCELL

INSTALLATION INSTRUCTIONS


VOLVO/MACK

PART NO. 107

1. REMOVE HOSE CLAMP.
2. REMOVE THE HOSE, SUPPORT RING AND INSERT THE AIRCELL SPACER INTO THE HOSE.
3. RELOCATE HOSE INSERTING THE AIRCELL SPACER INTO INTAKE MANIFOLD
4. NOTE DIRECTION OF THE AIRCELL SPACER.
5. REINSTALL HOSE CLAMP.

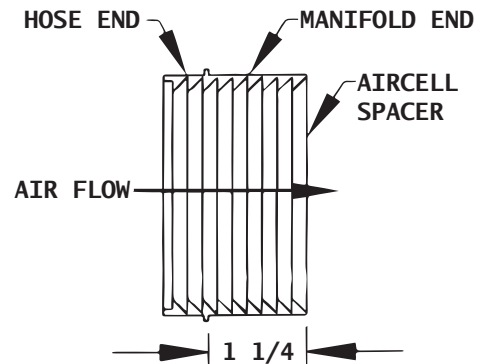

REMOVE SUPPORT RING BEFORE
INSTALLING AIRCELL SPACER

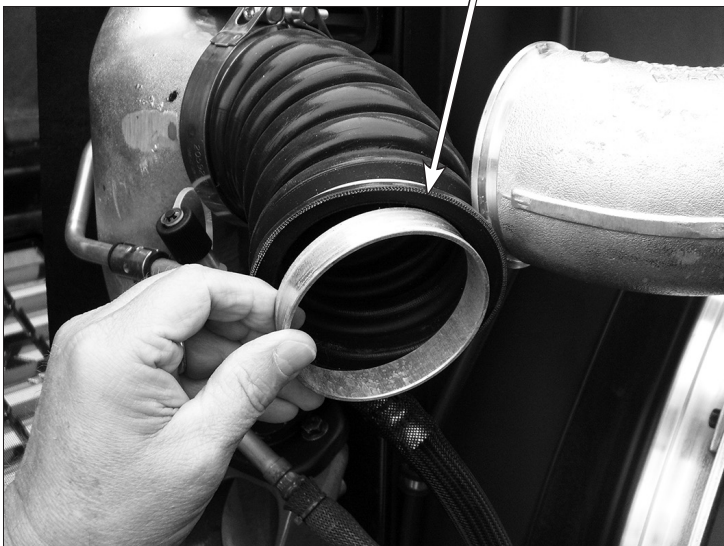

AIRCELL SPACER INSTALLED
INTO THE HOSE THEN INTO THE
INTAKE MANIFOLD (USE ABOVE
ILLUSTRATION TO ENSURE DIRECTION)

